


E-1870

1" Sq. Dr. Impact Wrench

E-1876 E-1878

Long Anvil 1" Sq. Dr. Impact Wrench

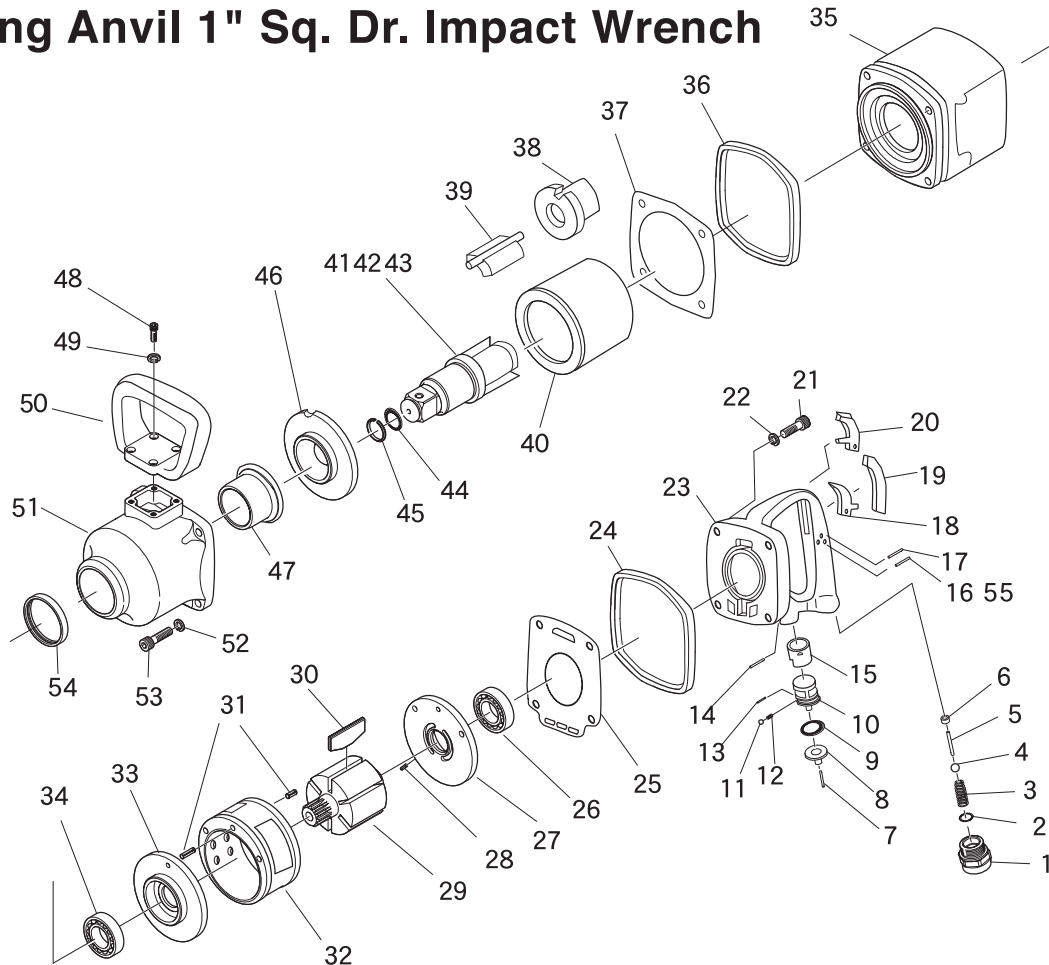

Ref. No.	Parts No.	Description	Q'ty	Ref. No.	Parts No.	Description	Q'ty
1	1901-46	Inlet Bushing	1	29	1900-29	Rotor	1
2	P-20	O-Ring	1	30	1900-30	Rotor Blade	6
3	1901-44	Valve Spring	1	31	1900-32	Roll pin	2
4	1901-43	Valve	1	32	1900-31A	Cylinder Assembly (incl.1900-32)	1
5	1901-42	Valve Pin	1	33	1900-28	Front Plate	1
6	1901-41	Valve Bushing	1	34	6205-Z	Ball Bearing	1
7	30-24	Roll Pin(3φ-24 mm)	1	35	1901-25A	Motor Housing	1
8	1901-58	Reverse Lever	1	36	1900-17	Front Housing Band	1
9	P-16	O-Ring	1	37	1900-16	Gasket	1
10	1901-52A	Adjust Valve Assy (incl.30-8)	1	38	1900-14	Cam	1
11	SB-40	Steel Ball	1	39	1900-12	Hammer Dog	1
12	1901-53	Spring	1	40	1900-11	Hammer Frame	1
13	30-8	Roll Pin(3φ-8mm)	1	41	1900-8A	Anvil Assembly (incl.1900-9,1900-10)	1
14	40-30	Roll Pin(4φ-30mm)	1	☆42	1900-8BA	6"Long Anvil Assembly (incl.1900-9,1900-10)	1
15	1901-51	Reverse Valve Bushing	1	★43	1900-8CA	8"Long Anvil Assembly (incl.1900-9,1900-10)	1
16	1901-63	Needle Pin (for Outside Lever)	1	44	1900-10	O-Ring	1
17	40-26	Roll Pin(4φ-26mm)	1	45	1900-9	Socket Retainer Ring	1
18	1901-60B	Inside Trigger	1	46	1900-6	Side Plate	1
19	1901-61	Outside Plug	1	47	1900-4	Anvil Bushing	1
20	1901-60	Out Side Trigger	1	48	Z-M60--180	Cap Screw	4
21	Z-M80--250	Cap Screw	4	49	HSW-60	Washer	4
22	HSW-80	Washer	4	50	1900-18	Dead Handle	1
23	1901-40A	Frame Handle Assembly (incl.1901-41, 1901-51)	1	51	1900-3A	Hammer Case Assembly (incl.1900-2,1900-4)	1
24	1900-37	Rear Housing Band	1	52	HSW-80	Washer	4
25	1901-36	Gasket	1	53	Z-M80--300	Cap Screw	4
26	6204	Ball Bearing	1	54	1900-2	Oil Seal	1
27	1900-33A	Rear End Plate Assembly (incl.40-10)	1	55	1901-63B	Needle Pin (for Inside Lever)	1
28	40-10	Roll Pin(4φ-10mm)	1				