

Hub Nut Removal Socket Set 1/2" Drv

Sizes: 17, 19, 21, 22, 24, 27mm + bar











Features

- These sockets are specially designed for removing damaged hub nuts.
- These sockets can be used to remove nuts which cannot be loosened in a normal way because of rust and/or deformation.
- These sockets are made from SNCM439 with HRC 50-53 hardness.

Operating Instructions

- 1. Choose an appropriate socket then place on the nut to be loosened and strike with a hammer.
- 2. Use a manual wrench to loosen the nut in an anti-clockwise direction.
- 3. Use the included bar to push the end of the nut stuck in the socket.

Safety Precautions

• Do NOT use any impact driver.

Caution

· Always wear safety glasses to protect eyes from any nut fragments.



@ 1300 137 753