


ET1397A

UD TRUCKS (CW520, CW530)

CRANKSHAFT REAR OIL SEAL INSTALLER

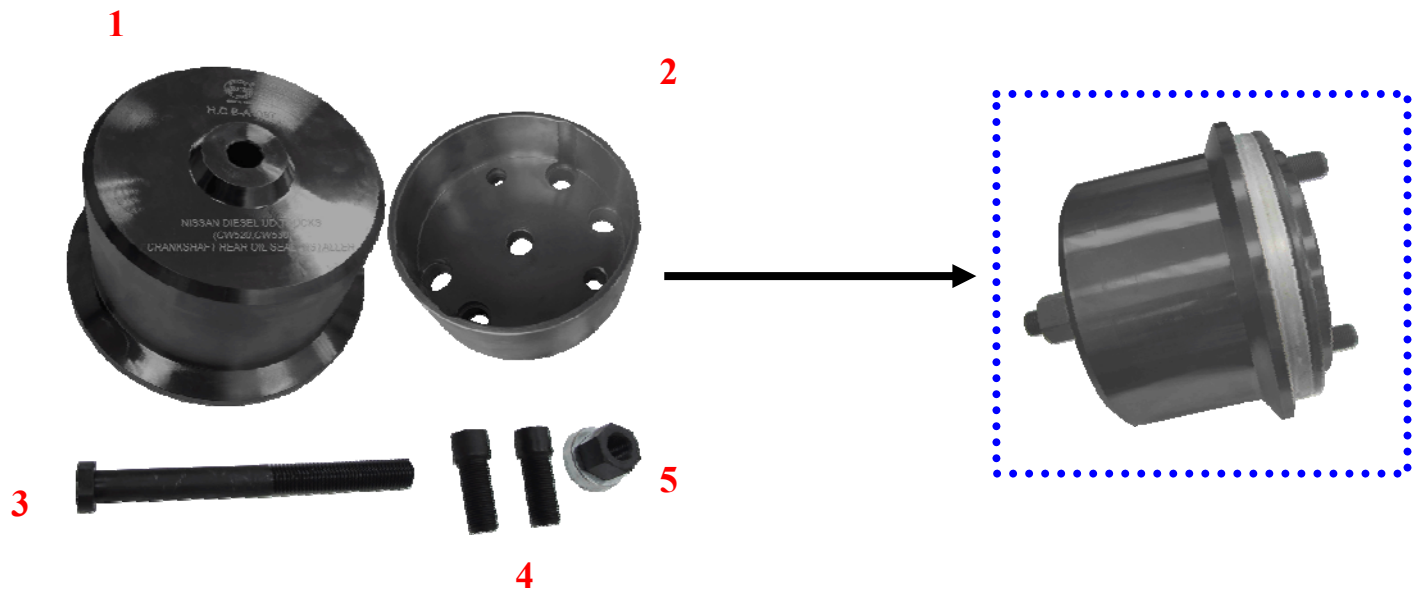

Rear Oil seal : BZ 5333 E



Rear Oil seal : BZ 4938E

Item No.	Description	Q'TY
A1397-1	Thrust piece 101 L x ϕ 174.5	1
A1397-2	Guiding Bushing ϕ 133 x 60.5 L	1
A1397-3	Center Screw ϕ 24 x 170 L	1
A1397-4	Fix Screw ϕ 20.5 x 50.5 L	2
A1397-5	Bearing and Nut ϕ 26 x 29 L	1



STEP:


1. Put the #3 **center screw** going through the #2 **guide bushing**.
2. Align the #2 **guide bushing** with the crankshaft horizontally and align with the position of pin.
3. Use # 4 **Fix screws** to tighten up the guide bushing.
4. Set the oil seal into the guide bushing.



Before installing, put glue on oil seal to prevent leak.



5. Set the #1 **thrust piece** to cover the guide bushing.
6. Use #5 **bearing and nut** to tighten up to the end.
7. Remove the tools, and then the replacement is completed.

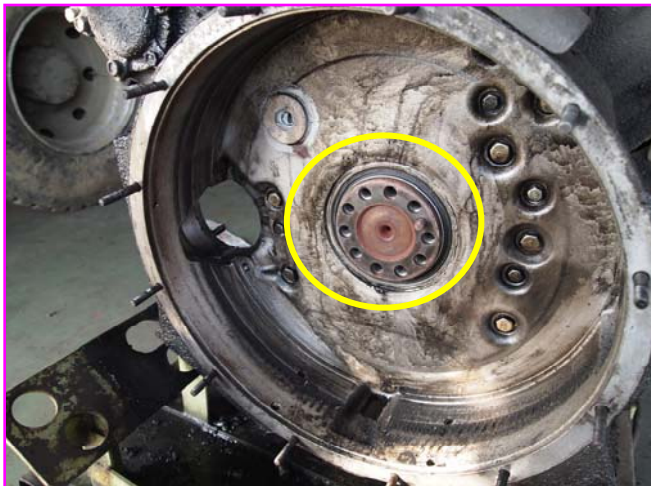

← (CW 520)

- To prevent the crankshaft rear oil seal from damage when installing it. It is very easy to damage an oil seal without using this tool.
- Application: UD TRUCK CW520 and CW530
- Oil Seal Genuine no.: BZ5333E→CW520
BZ4938E→CW530