




endeavour

ET1586A

HINO 11 TONS WHEEL SPEED SENSOR REMOVAL / INSTALLATION TOOL

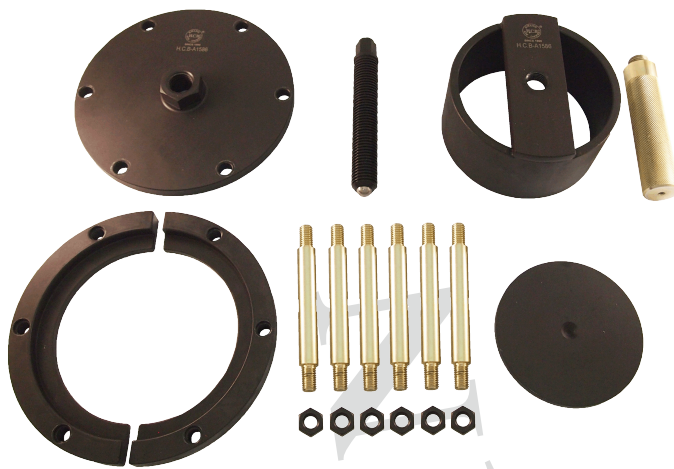

Removal



Installation

- Use to remove and install the wheel speed sensor.
- On car maintenance.
- Application: HINO 11 tons truck




IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY.

- ※ Warning! Ensure Health and Safety, local authority and general work shop practice regulations are adhered to when using tools.
- ※ DO NOT use tool if damaged.
- ※ Maintain tool in good and clean condition for best and safest performance.
- ※ WARNING! The warnings, caution and instructions referred to in this manual cannot cover all possible conditions and situations that may occur. It must be understood that common sense and caution are factors which cannot be built into this product, but must be applied by the operator.

Operating Instructions

Extraction

■ Install the tool on the hub, and then turn the screw until the wheel speed sensor is removed.

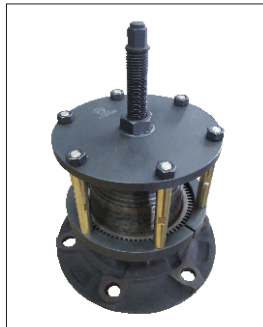

Installation

- Put wheel speed sensor on the wheel hub first and then install the tool.
- To hammer the sensor on until it is correctly positioned.

