

ET3036A AIR HYDRAULIC PUMP (1600 c.c.) (Dr. 3/8" ADAPTOR)

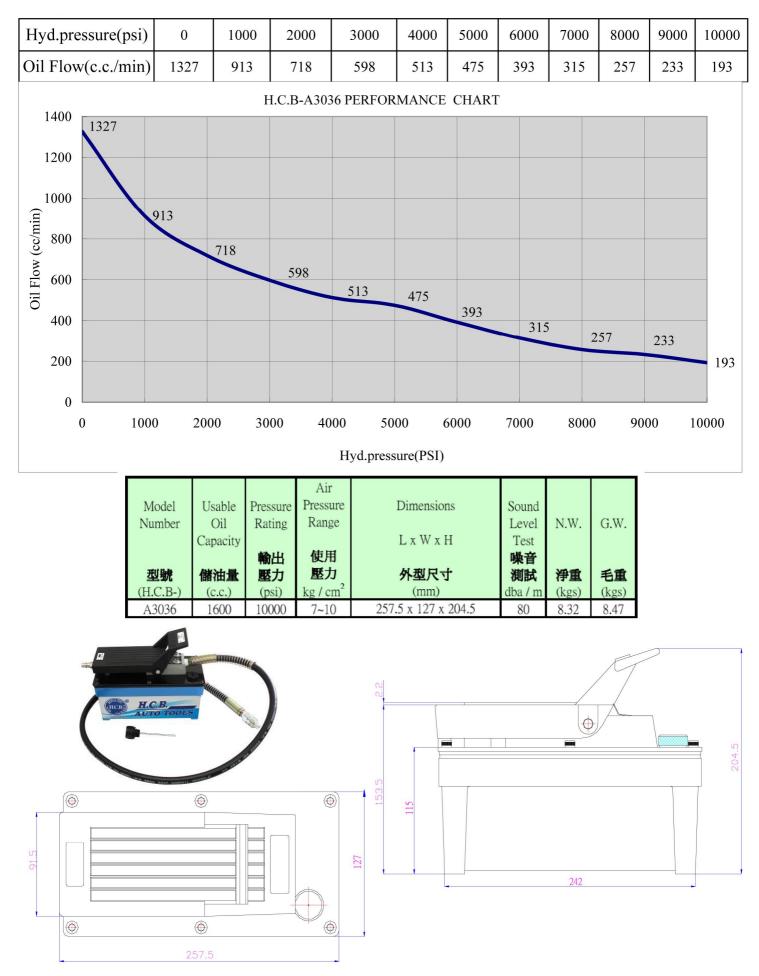

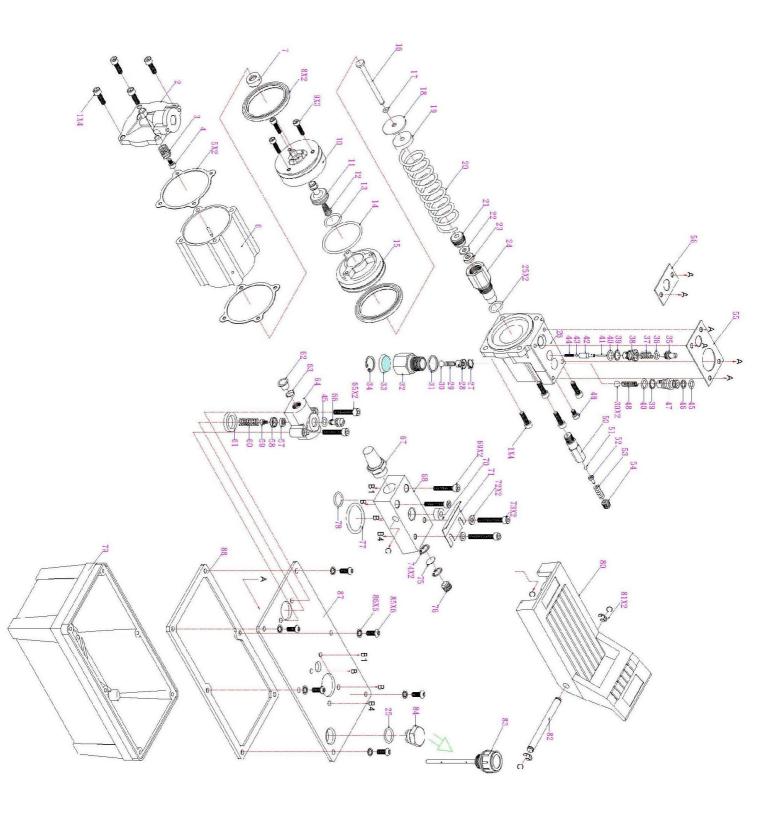



PART NO.	DESCRIPTION	NO REQ	PART NO.	DESCRIPTION	NO REQ
1	Bolt	8	51	Steel Ball	1
2	Тор Сар	1	52	Stud	1
3	Spring	1	53	Spring	1
4	Bolt	1	54	Screw	1
5	Packing	2		Packing A	1
6	Cylinder Tube	1		Packing B	1
7	Reservoir Cop	1	57	O-Ring Washer	1
8	Back-Up Ring	2	58	Air Inlet Valve Cap	1
Concernance of the local division of the	Bolt	3	59	Bolt	1
	Air Piston A	1		Spring	1
	Change Piston	1	61	O-Ring Washer	1
		1	62	Cover	1
	Spring O-Ring	1		Filter	1
	O-Ring	1		Air Inlet Valve Seat	
	Air Piston B	1	64	Blot	1
~~		1	65	Air Inlet Valve	2
	Pump Piston	1		Silencer	1
	O-Ring		67		1
	Piston Cylinder Cap	1	68	Oil Outlet Valve Seat	1
	O-Ring Washer	1	69	Bolt	2
	Piston Extension Spring	1	70	Wiper	1
the second s	Pump Cylinder Cap	1	71	Foot Pedal Stop	1
	Back-Up Ring	1	72	Washer	2
23	U-Cup Ring	1	73	Bolt	2
	Pump Cylinder	1	74	C-Ring	2
	O-Ring	2	75	Filter	11
	Hydraulic Base	1	76	Bolt	1.1.1.1
	C-Ring	$\sim 1^{-1}$	Contraction and the second second second second	O-Ring	1
	Oil Inlet Valve Stud	1		O-Ring	1
	Spring	1		Oil Container	1
	Steel Ball	2		Foot Pedal	1
	O-Ring	1. 1.		E-Ring	2
	Oil Inlet Valve	1	82	Foot Pedal Axle	1
33	Filter	1.	83	Air Ventilation Bolt	1
	C-Ring	1		Bolt	1
	Release Valve Blot	1	85	Bolt	6
36	O-Ring	1	86	Washer	6
	Spring	1	87	Cover	1
	Release Valve Base	1	88	Oil Packing	1
39	Back-Up Ring	2			
	O-Ring	2		14 ¹⁵	
	Steel Ball Axile	1			4
	Release Valve	. 1			
	Steel Ball	1			
	Spring	1	2.5	A CONTRACTOR AND A CONTRA	1
	O-Ring	2	1. A.		64 4 4
	Back-Up Ring	1			
	Oil inlet Valve	1			
_	Spring	1			
	Blot	1	·	a de la companya de la	
	Valve Cartridge	1			· · · ·

AIR PUMP PERFORMANCE CHART

Warning Before Using the Air Pump

Ì

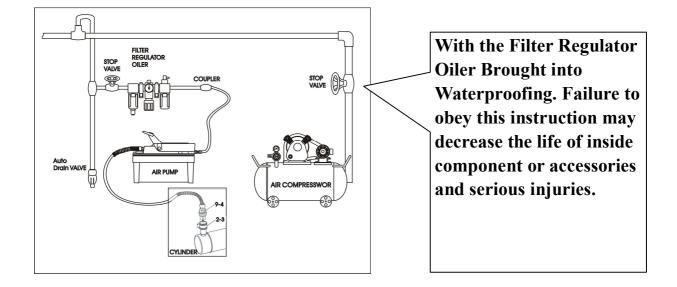

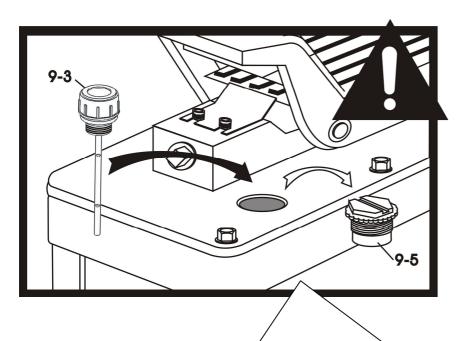

Notice

Before changing the 9-5 Screw for 9-3 Oil Tank Level, disconnect the pump from air supply.