

Diesel Injector Puller (Ford Transit)

ET8912

M17 x 0.75

The removal of jammed **two-piece injector** can be carried out without having to de-install the cylinder head.

- De-install the injector top part with injector removal socket.
- (To do so, the electrical connection must be removed.)
- Screw pull spindle into the injector bottom part.
- Slide support sleeve over pull spindle and screw on shoulder nut.
- Remove the injector by turning shoulder nut.

Support sleeve



 
Shoulder nut
(with bearing)



Injector removal socket



Pull spindle




10 mm 24 mm 1/2" dr.

10 mm

24 mm

1/2" dr.

OEM Ref. 303-1690

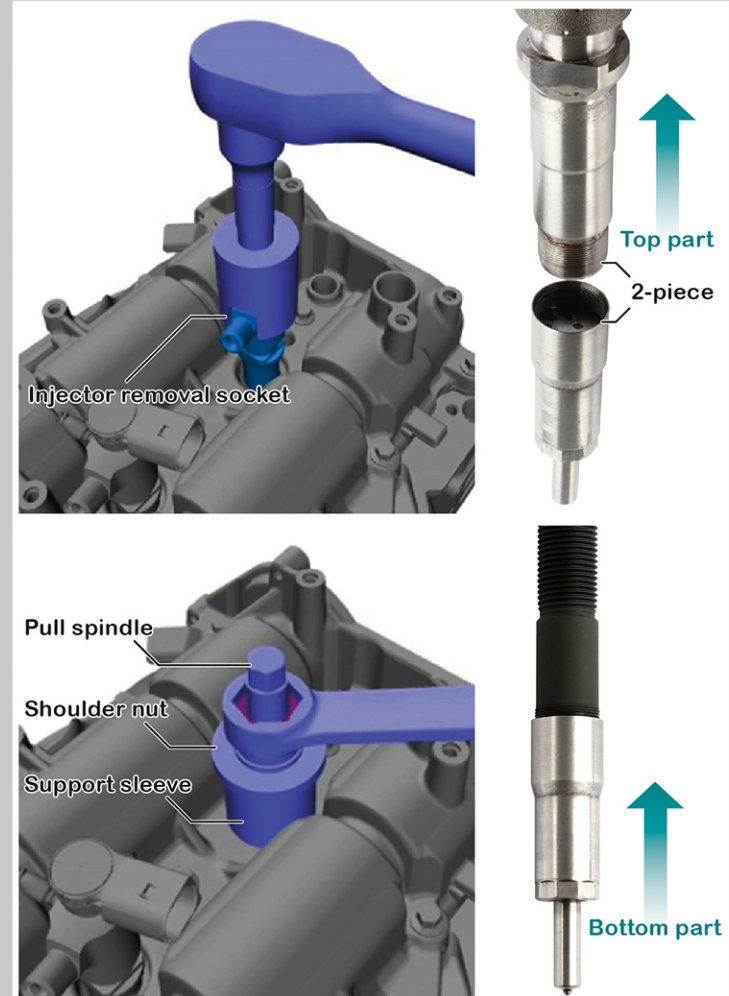

Ford EcoBlue 2.0L TDCi diesel engine

Transit 2014~

Transit Custom 2012~