 
 


ET9120A

ISUZU NPR 4.8L 5.2L CRANK **FRONT** SEAL WEAR RING INSTALLER TOOL

 
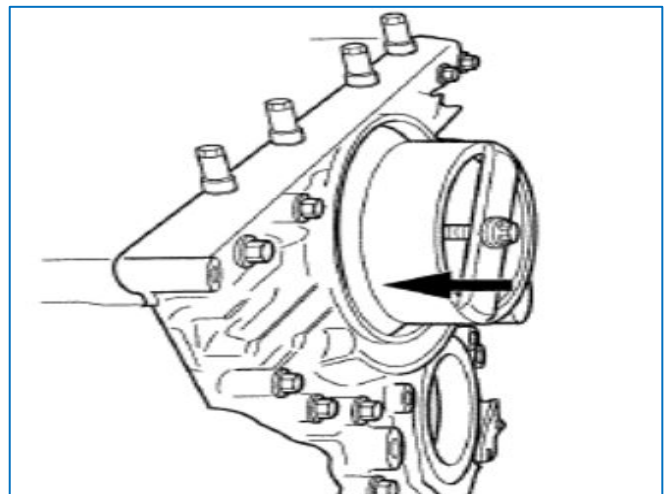 


- This tool is to install the front crankshaft oil slinger
- Application: Medium Duty Truck, NPR, Isuzu 4.8L 4HE1 and 5.2L 4HK1 diesel engine
- OEM equiv: 5-8840-2703-0-FT (J-43282)
- Step of usage
 1. Press-fit the slinger using an oil seal installer kit.
 2. Put the sleeve over the adapter, place a washer on the center bolt and tighten the bolt until the sleeve touches the adapter to press fit the front slinger.

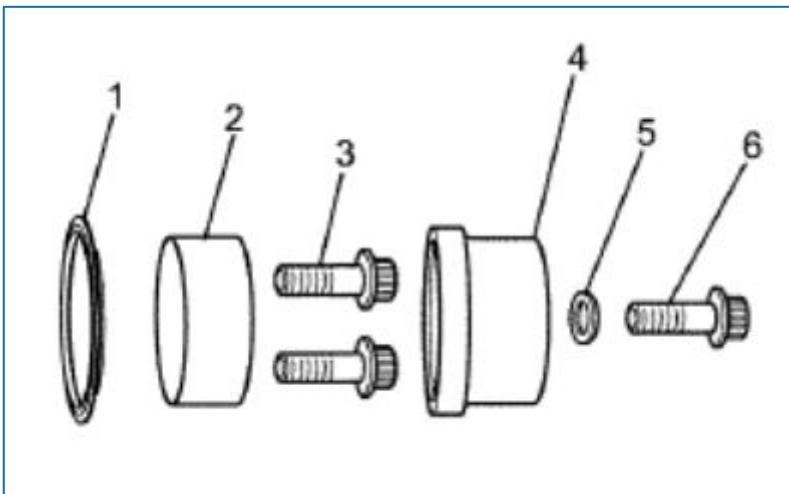

ET9120B

ISUZU NPR 4.8L 5.2L CRANK **REAR** SEAL WEAR RING INSTALLER TOOL

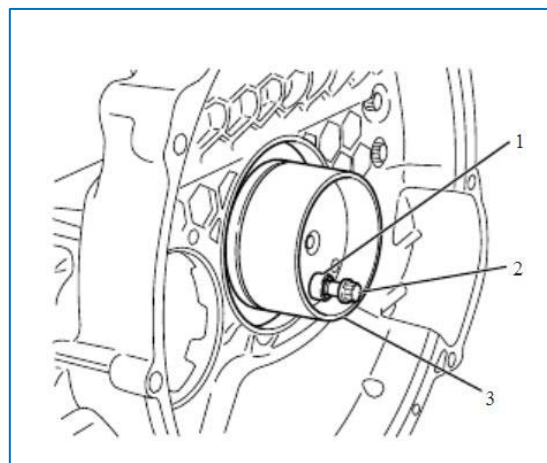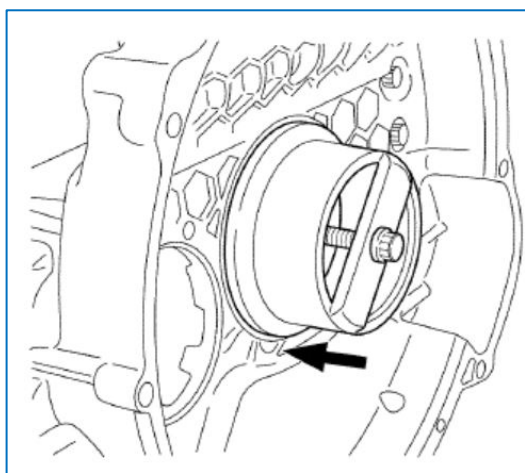

- This tool is to install the rear crankshaft oil slinger
- Application: Medium Duty Truck, NPR, Isuzu 4.8L 4HE1 and 5.2L 4HK1 diesel engine
- OEM equiv: J-43282-RR

Step of usage

1. Press-fit the slinger using an oil seal installer kit.
2. Put the sleeve over the adapter, place a washer on the center bolt and tighten the bolt until the sleeve touches the adapter to press fit the rear slinger.