

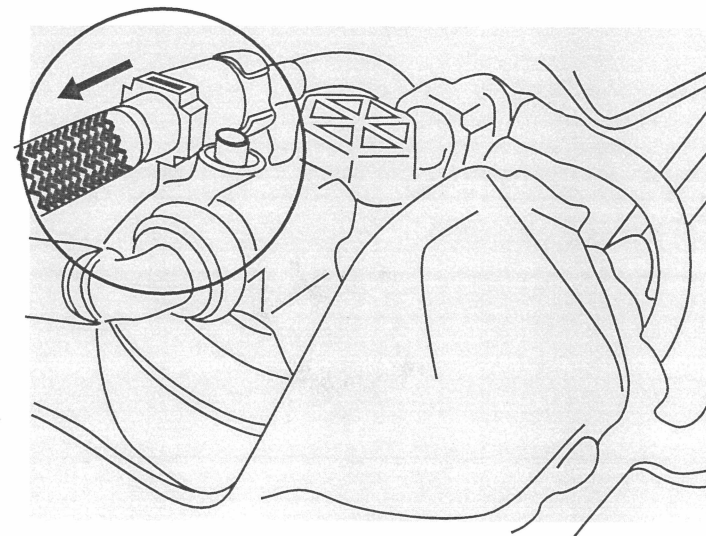


DIESEL FUEL LINE PRIMING SET

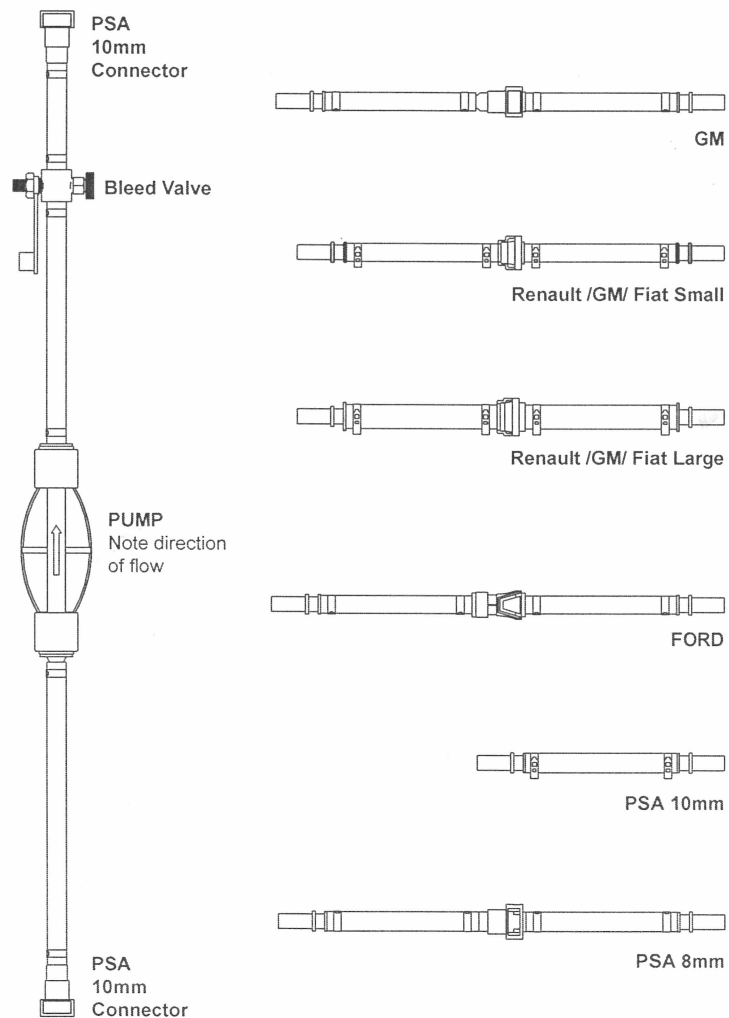


1.Disconnect low pressure diesel line.

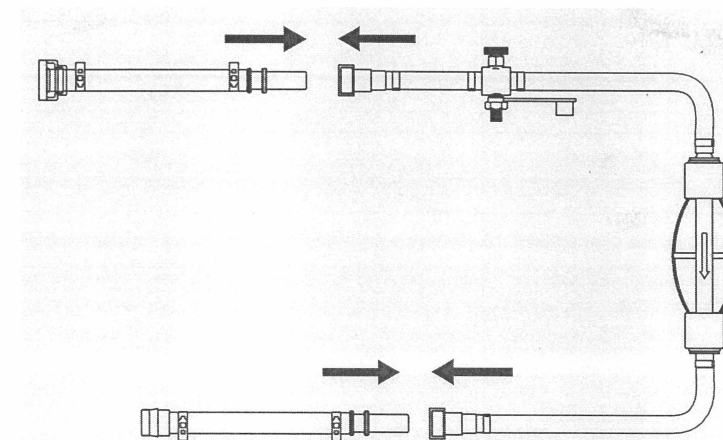


2.Choose right connector from the selection.




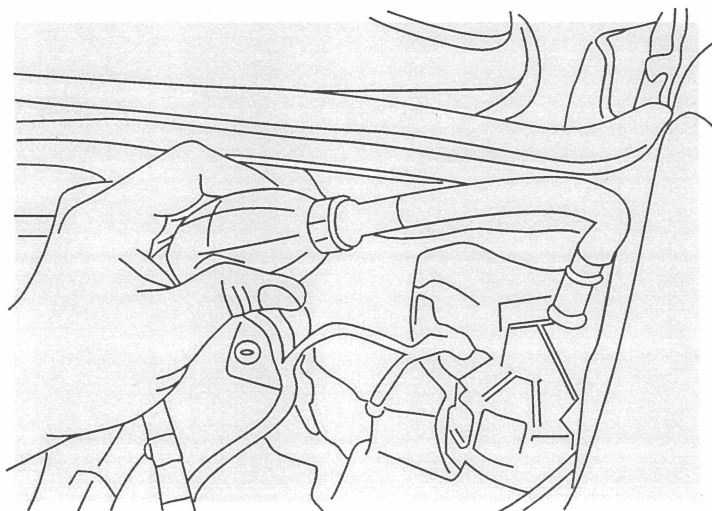

3.Connect to the system.

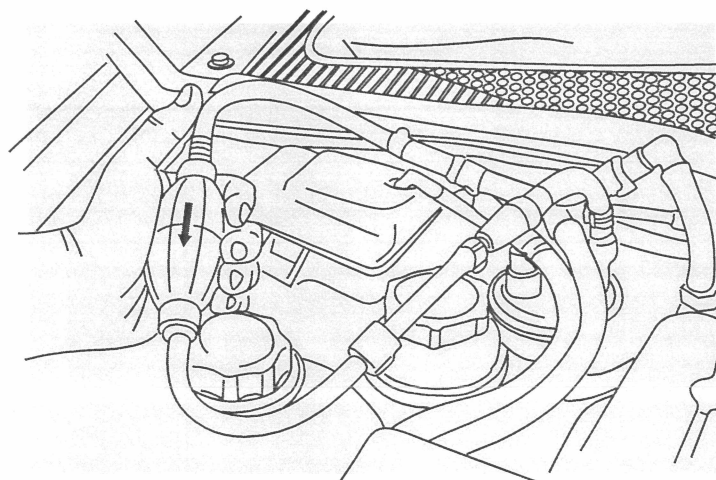

4.Pumping to bleed out air.

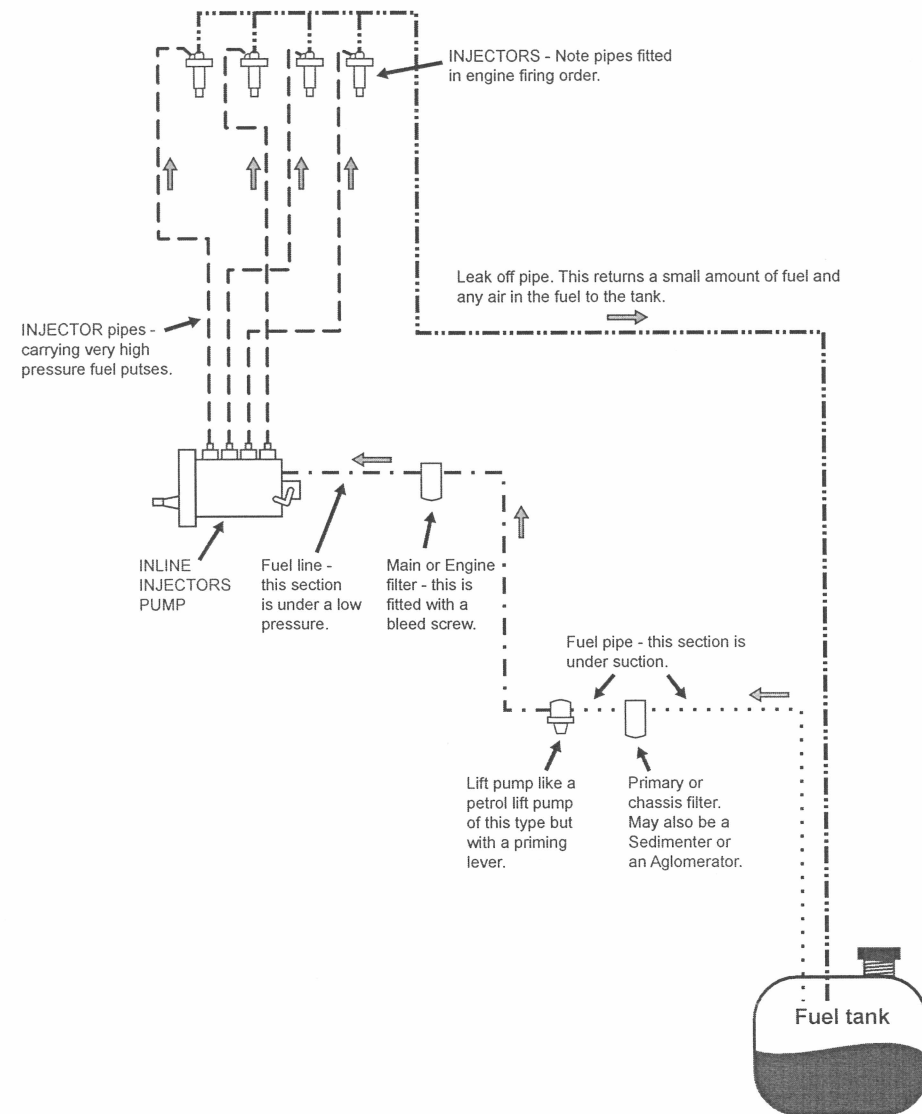

- SUCTION
- LOW PRESSURE
- VERY HIGH PRESSURE (2500psi about 150bar)
- VERY LOW PRESSURE (depends on height of tank)