

Automatic Igniting

 
· Portable Model multi-function heat tool

SPECIFICATIONS

Length: w/cap w/soldering tip	275 mm (10 in) 263 mm (9.7 in)
Weight (when gas-filled)	240 g
Approximate temperature soldering tip	250~550°C (480~1000°F)
Torch	1300°C (2400°F)
Gas container capacity	20 ml
Operating Time (one gas filling)	30 min at mid setting

FEATURES:

- Equivalent to a power range from 30 to 125 Watt.
- · Cordless / simple / and safe operate under any conditions, anywhere
- · Ready to use 15 seconds after ignition.
- · Tank contains fuel for 30 minutes of operation.
- · No electrical interference.
- · Comes with soldering tip and protective cap.



- ·Soldering Iron Tips are shaped from a copper bar, then, coated with protective iron plating.
- •Though the Coating is thick for improved durability, it has good heat conductivity for more efficient thermal recovery.

Warnings:

- · When unit is fueled with flammable gas(Butane) under pressure-use with care.
- DO NOT expose to heat above+50°C (+120°F) and avoid prolonged exposure to sun.
- · Be extremely careful as torch flame is almost invisible in daylight or strong light.
- Excessive gas flow, flaming or catalyst pulsing red may occur when the regulator is incorrectly adjusted, i.e., set too high.
- · DO NOT refill, ignite or use near open flame, heater, furnace or combustible materials.
- KEEP WORK AREA CLEAN. Cluttered areas and benches invite injuries.
- KEEP AWAY FROM CHILDREN. Visitors should be kept away from work area.
- STORE WHEN NOT IN USE. Store unit in dry, locked cabinet out of reach of children.
- · USE SAFETY GLASSES TO PROTECT YOUR EYES.
- DO NOT OVERREACH. Keep proper footing and balance at all times.
- STAY ALERT. Watch what you are doing. Use common sense. Do not operate unit when you are tired.
- · DO NOT TOUCH THE HEATED TIP OR BARREL OF THE UNIT.
- · DO NOT leave unit unattended when it is operating or still hot.
- ALWAYS BE SURE THE UNIT IS COOL BEFORE STORING.
- DO NOT REPLACE CAP WITHOUT SWITCHING UNIT OFF AND ENSURING TIP HAS COOLED.
- · Ensure flame is extinguished before storing unit.
- · USE ONLY IN WELL VENTILATED AREA.
- DO NOT ATTEMPT TO READJUST OR REPAIR. UNIT IS NOT USER SERVICEABLE
- · READ ENCLOSED INSTRUCTION MANUAL PRIOR TO USE.
- · BUTANE NOT INCLUDED.

AVAILABLE TIPS:







