


ET1108


VW T4 FRONT AXLE UPPER BALL-JOINT EXTRACTION/ INSTALLATION TOOL KIT

PAT. I 233868 DE PAT.




VIDEO

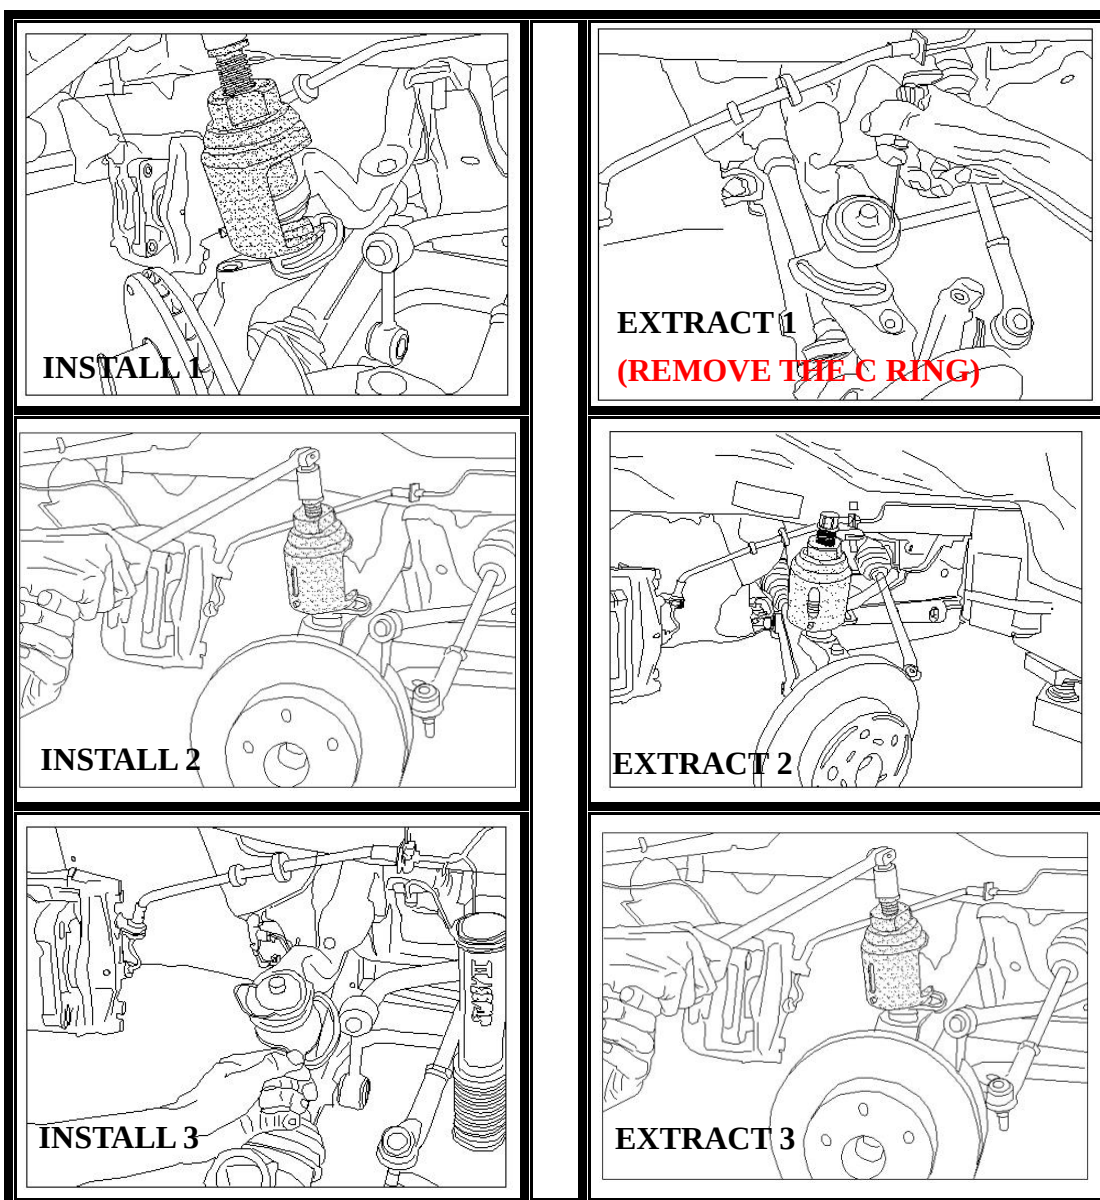

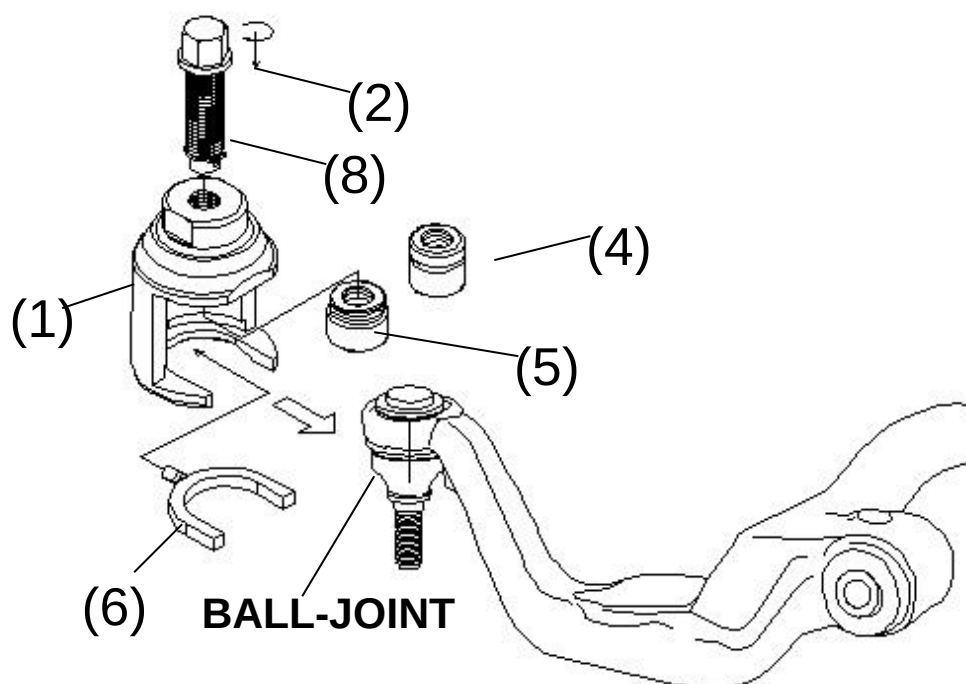

EXTRACT

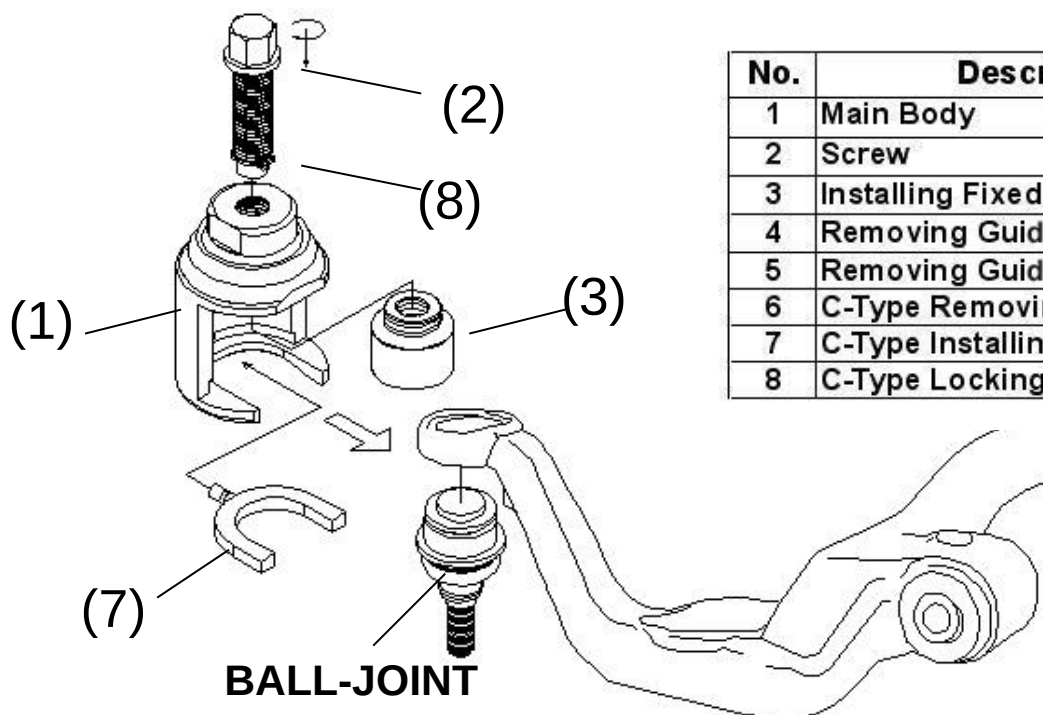

No.	Description	Q' ty
1	Main Body	1
2	Screw	1
3	Installing Fixed Base	1
4	Removing Guide Ring	1
5	Removing Guide Ring	1
6	C-Type Removing Fixed Mass	1
7	C-Type Installing Fixed Mass	1
8	C-Type Locking Ring	1

INSTALL

WARNING :

Clean and lubricate the screw with grease (MOS2), before using it.

- The upper ball-joint may be removed and replaced within 30 minutes by using the new tool ET1108, no need to dismantle the upper wishbone.