


H.C.B-A1111




VIDEO

BENZ (W203/W211/W220) SUB-FRAME BUSH REMOVAL/ INSTALLATION TOOL KIT


USA PAT. 6389668 PAT.201280

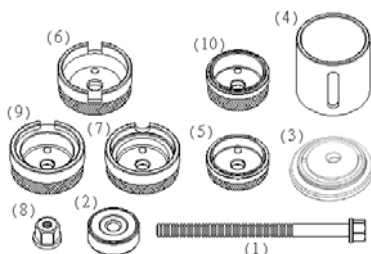


Part No.	Description	Dimension	Quantity
1	Screw	M14*P3.0	1
2	Bearing Base	#51206	1
3	Fixed Base	Ø 84*20L	1
4	Detachable Base	Ø 81*80L	1
5	Extraction Pressure Piece	Ø69*22L	1
6	Installation Pressure Piece	Ø 82*35L	1
7	Installation Fixed Base	Ø 82*33L	1
8	Nut	M14*P3.0	1
9	Installation Pressure Piece	Ø 82*36L	1
10	Extraction Pressure Piece	Ø 69*30L	1

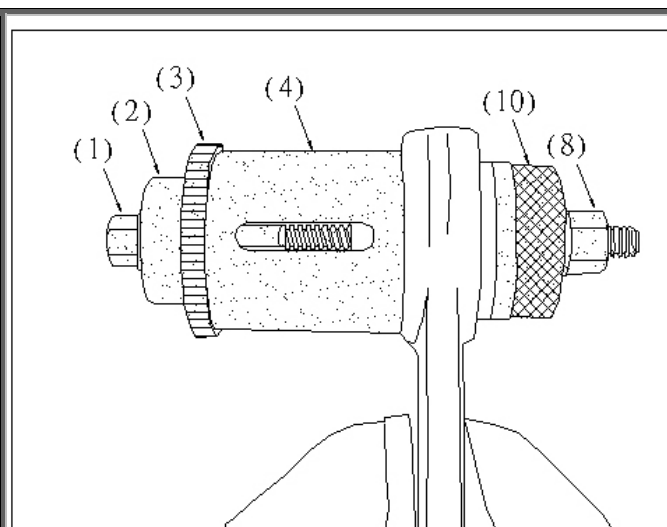


W220,W203 BUSH EXTRACT

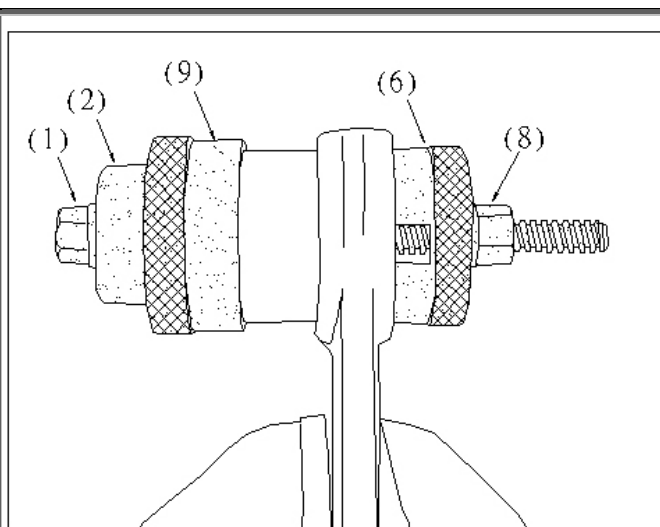

W220,W203 BUSH INSTALL

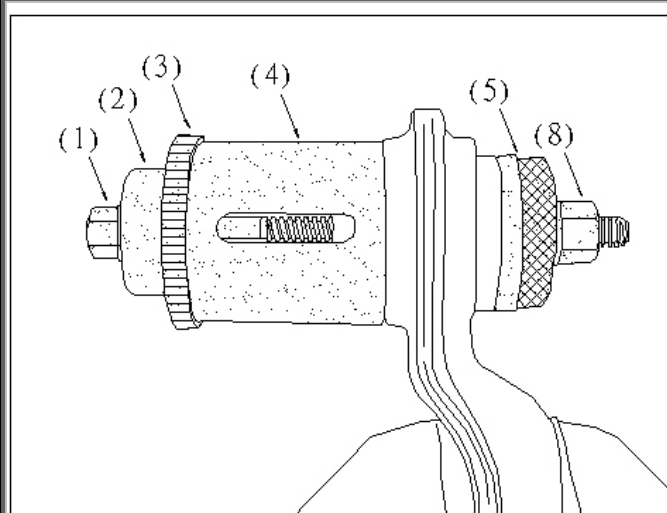

W211 BUSH EXTRACT

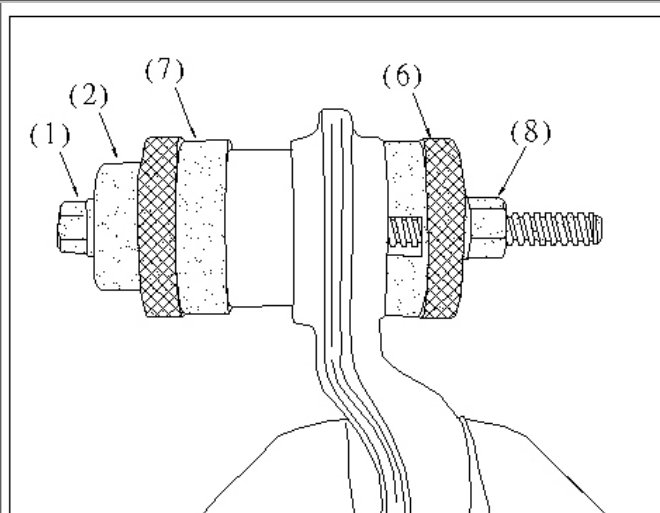

W211 BUSH INSTALL