

ET1575A

VW T5 FRONT LOWER TRACK CONTROL ARM BUSH REMOVAL /INSTALLATION TOOL KIT PAT.M504750











Front bush no.: 26937 01 Rear bush no.: 26935 01



IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY.

*Warning! Ensure Health and Safey, local authority and general work shop practice regulations are adhered to when using tools.

XDO NOT use tool if damaged.

*Maintain tool in good and clean condition for best and safest performance.

WARNING! The warnings, caution and instructions referred to in this manual cannot cover all possible conditions and situations that may occur. It must be understand that common sense and caution are factors which cannot be built into this product , but must be applied by the operator.

Description

Easily and quickly remove and install bush.

ON-CAR operation saves time and energy

Application: VW T5



After 2011 2008-2010 2005-2007

Parts No.	Description	Dimension
1	Removing body	D: Ø70x76L d: Ø14.5
2	Removing plate	D: Ø59.5x24L d: Ø14.5
3	Installing plate	D: Ø69.5x24L d: Ø14.5
4	Installing body	D: Ø73x27L d: Ø14.5
5	Installing body	D: Ø57x25L d: Ø14.5
6	Installing plate	D: Ø53x18L d: Ø14.5
7	Bearing	D: Ø57x23L d: Ø14.5
8	Removing plate	D: Ø30x10L d: Ø14.5
9	Adapter of Nut	H24x50L
10	Nut	M14xP2.0
11	Nut	M14xP3.0
12	Threaded rod	M14xP3.0x212L, H21
13	Threaded rod	M14xP2.0x265L, H10

Operating Instructions

- 1. Clean the area surrounding the bush
- 2. Clean & lubricate the threaded rod each time before use.

Front bushing Extraction



- 1. Put No.1 in front of the lower track control arm and install No. 7, then let No.12 pass through the end of the Bushing.
- 2. Install No.2 and lock No.11 after. The extraction is completed.

Front bushing Installation

To facilitate correct positioning of the bush, the installation adaptor(4) has 2 recesses that align with the face of the new bush









1. Install No.3 together with the bushing as the above photo, and then install No.7.
2. Install No.12 pass through the end of the Bushing. Then install No.4 and lock No.11 after. The installation is completed.

Rear Bushing Extraction

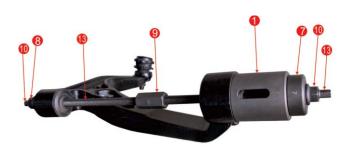

- 1. Install No.13 pass through the two bushings. Install No.9 and adjust the position in the middle and lock.
- 2. Put No.1 in front of the lower track control arm. Install No. 7 and lock No. 10 after.
- 3. Install No. 8 in the rear bushing and lock No. 10. The extraction is completed.

Rear Bushing Installation

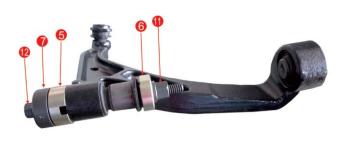

- 1. Put No.5 in front of the lower track control arm and then install No.7. Install No.12 pass through the end of the Bushing.
- 2. Put bushing first and then install No.6. After lock No.11 and the installation is completed.